


## 4. SETUP

### 1. DETAILED NAVIGATION SETTINGS

Settings are available for driving speeds, favorite POI categories, automatic screen change, "◀◀ Off" function, etc.


- 1 Press the "MENU" button on the Remote Touch.

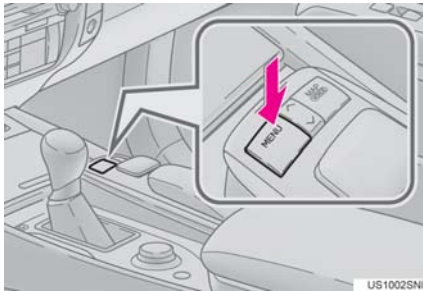


- 2 Select "Setup".




- 3 Select "Navigation".

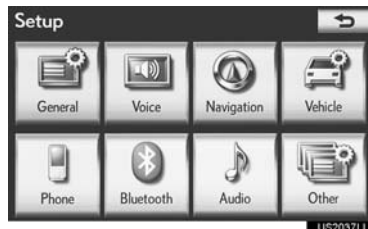

- 4 Select "Detailed Navi. Settings".


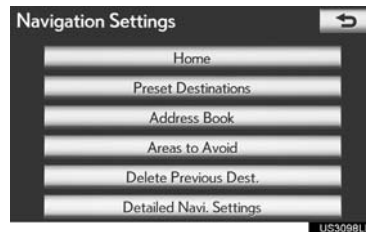


- 5 Select the items to be set.

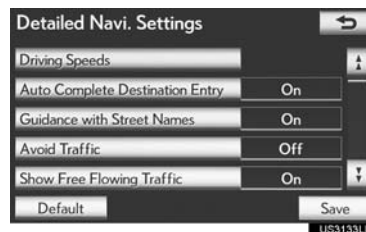

- 6 Select "Save".

### SCREENS FOR NAVIGATION SETTINGS

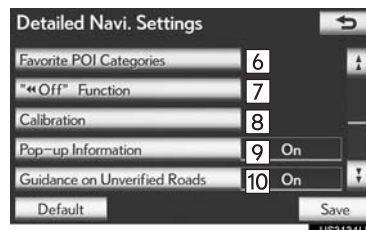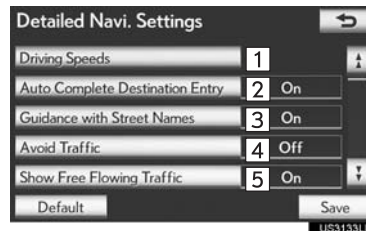

- On this screen, the following functions can be performed:

## 4. SETUP

No.	Function
1	Select to set the average cruising speed. (See "DRIVING SPEEDS" on page 124.)
2	Select to set the automatic input function to "On" or "Off".
3	Select to set the voice guidance for the next street name to "On" or "Off" during route guidance.
4	Select to set the automatic reroute of the guidance route to avoid heavy congestion to "On" or "Off". (See "AUTO AVOID TRAFFIC" on page 125.)
5	Select to set the indication of freely flowing traffic by the arrow to "On" or "Off". (See "SHOW FREE FLOWING TRAFFIC" on page 126.)
6	Select to set displayed POI icon categories. (See "POI CATEGORY CHANGE (SELECT POI ICONS)" on page 126.)
7	Select to set screen buttons to be displayed on the map screen when "◀◀Off" is selected. (See "SCREEN LAYOUT FUNCTION ("◀◀Off" Function)" on page 127.)

No.	Function
8	Select to adjust the current position mark manually. Miscalculation of the distance caused by tire replacement can also be adjusted. (See "CURRENT POSITION/TIRE CHANGE CALIBRATION" on page 128.)
9	Select to set the display of pop-up information to "On" or "Off". (See "POP-UP INFORMATION" on page 129.)
10	Select to set IPD road guidance to "On" or "Off". (For information on IPD roads, see page 94.)


- To reset all setup items, select "Default".

### DRIVING SPEEDS


The speed that is used for the calculation of the estimated travel time and estimated arrival time can be set.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.

## 4 Select "Driving Speeds".

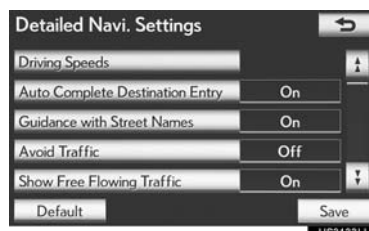

## 5 Select "&lt;" or "&gt;" to set the average vehicle speeds for "Residential", "Main Streets" and "Freeways".

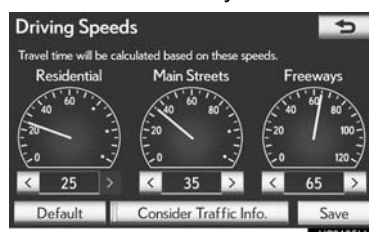

- To set the default speeds, select "Default".
  - To use settings based on traffic information, select "Consider Traffic Info.".
- 6 After setting of the desired speeds is completed, select "Save".


**INFORMATION**

- The displayed time to the destination is the approximate driving time that is calculated based on the selected speeds and the actual position along the guidance route.
- The time shown on the screen may vary greatly depending on progress along the route, which may be affected by conditions such as traffic jams and construction work.
- Up to 99 hours 59 minutes can be displayed.

**AUTO AVOID TRAFFIC**

The guidance route automatically changes to another route to avoid heavy congestion when "Avoid Traffic" is turned on.

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Avoid Traffic".

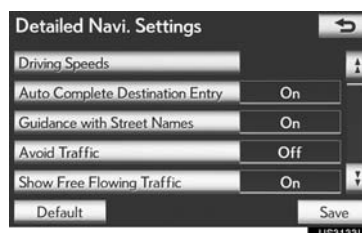

- 5 Select "On" or "Off".
- 6 Select "Save".

- When congestion information about the guidance route has been received, a screen will appear to ask if it is desirable to reroute to avoid the congestion.
- Select "Yes" to reroute. Another route to avoid the congestion will appear.
- Select "No" if it is not desirable to reroute.

**INFORMATION**


- When the "Traffic Information" indicator is dimmed, "Avoid Traffic", "Traffic Incident Warning" and "Show Free Flowing Traffic" will not operate.

## 4. SETUP

### SHOW FREE FLOWING TRAFFIC

Free flowing traffic can be shown by an arrow when **"Show Free Flowing Traffic"** is turned on.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Detailed Navi. Settings"** on the "Navigation Settings" screen.
- 4 Select **"Show Free Flowing Traffic"**.

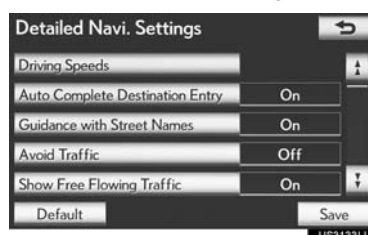

- 5 Select **"On"** or **"Off"**.
- 6 Select **"Save"**.


#### INFORMATION

- When the "Traffic Information" indicator is dimmed, "Avoid Traffic", "Traffic Incident Warning" and "Show Free Flowing Traffic" will not operate.


### POI CATEGORY CHANGE (SELECT POI ICONS)

Select up to 6 POI icons to be displayed on the map screen.


- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Detailed Navi. Settings"** on the "Navigation Settings" screen.
- 4 Select **"Favorite POI Categories"**.

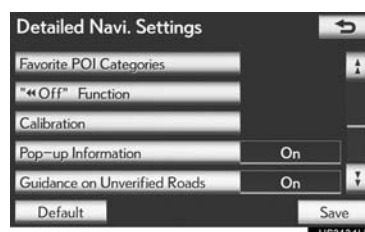

- 5 Select the category to be changed.

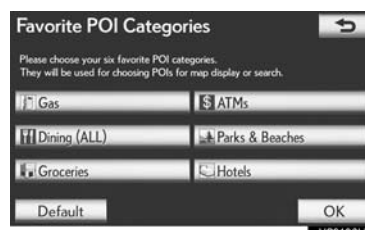


- 6 Select the desired group.

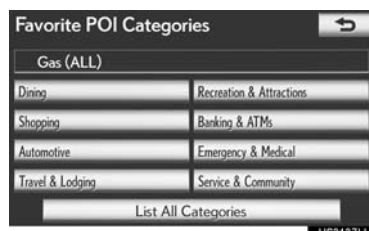

- If the desired POI category is not on the screen, select **"List All Categories"** to list all POI categories.

- 7 Select the desired category.

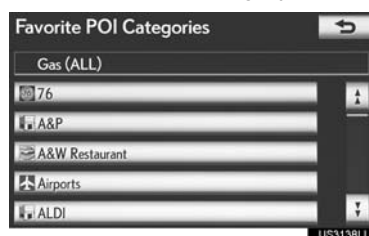


- The screen returns to the first page of the **"Favorite POI Categories"** screen.

- 8 Select **"OK"**.

### SCREEN LAYOUT FUNCTION ("◀◀ Off" Function)

Each screen button and current street name on the map screen can be displayed or hidden.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the **"Setup"** screen.
- 3 Select **"Detailed Navi. Settings"** on the **"Navigation Settings"** screen.
- 4 Select **"◀◀ Off" Function**.

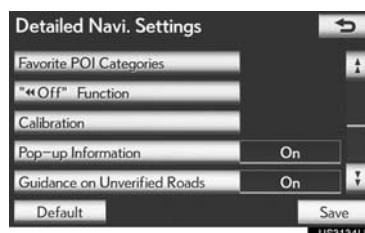

- 5 Select the screen buttons to be turned off. The selected screen buttons will be dimmed.




- To set the setting as a default, select **"Default"**.
- 6 Select **"OK"**.
  - The previous screen will be displayed.
  - 7 Select **"Save"**.

## 4. SETUP


### CURRENT POSITION/TIRE CHANGE CALIBRATION

The current position mark can be adjusted manually. Miscalculation of the distance caused by tire replacement can also be adjusted.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Detailed Navi. Settings"** on the "Navigation Settings" screen.
- 4 Select **"Calibration"**.

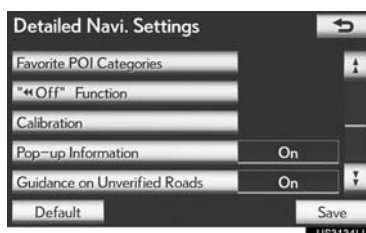

- 5 Select the desired screen button.

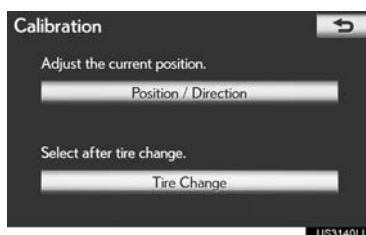


- For additional information on the accuracy of a current position, see "LIMITATIONS OF THE NAVIGATION SYSTEM" on page 137.

### POSITION/DIRECTION CALIBRATION

When driving, the current position mark will be automatically corrected by GPS signals. If GPS reception is poor due to location, the current position mark can be adjusted manually.

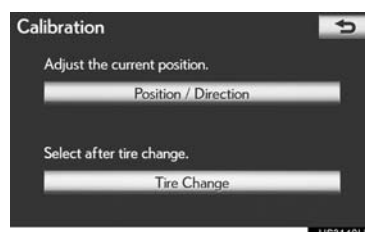

- 1 Select **"Position / Direction"**.



- 2 Select one of the 8 directional screen buttons to move the cursor to the desired point on the map.



- 3 Select **"OK"**.

- 4 Select either  or  to adjust the direction of the current position mark.




- 5 Select "OK".
- The map will be displayed.

#### ■ TIRE CHANGE CALIBRATION

The tire change calibration function will be used when replacing the tires. This function will adjust miscalculation caused by the circumference difference between the old and new tires.

- 1 To perform the distance calibration procedure, select "Tire Change".

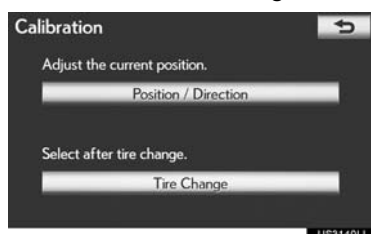

- The message appears and the quick distance calibration is automatically started. A few seconds later, a map will be displayed.


#### INFORMATION

- If this procedure is not performed when the tires are replaced, the current position mark may be incorrectly displayed.

#### POP-UP INFORMATION

When "Pop-up information" is turned on, pop-up information will be displayed.


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Detailed Navi. Settings" on the "Navigation Settings" screen.
- 4 Select "Pop-up Information".

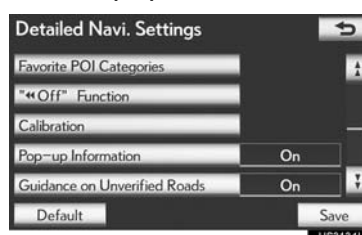

- 5 Select "On" or "Off".
  - 6 Select "Save".
- When "Pop-up Information" is turned off, the following messages will not be displayed.

#### 4. SETUP

- This message appears when the map is displayed POI icons and the map scale is over 0.5 miles (800 m).

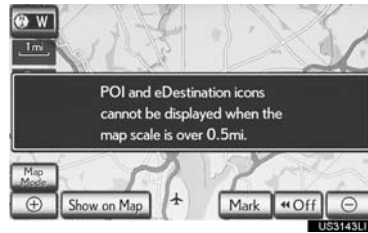

- This message appears when the map is switched to dual map screen mode.






## 4. SETUP

# 2. VEHICLE SETTINGS

### MAINTENANCE

When the navigation system is turned on, the "Maintenance Reminder" screen displays when it is time to replace a part or certain components. (See page 32.)


- 1 Press the "MENU" button on the Remote Touch.

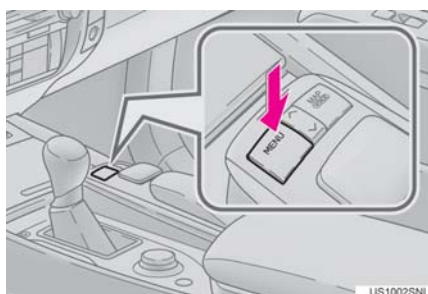


- 2 Select "Setup".




- 3 Select "Vehicle".

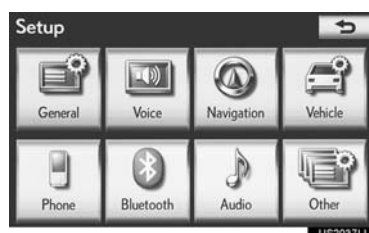

- 4 Select "Maintenance".

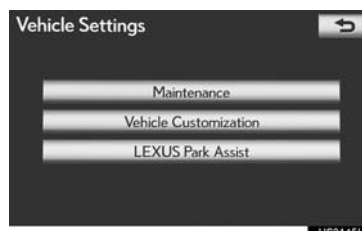

- 5 Select the desired screen button.

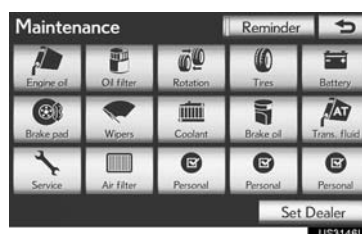

- Setting maintenance information. (See page 132.)
- Setting dealer. (See page 133.)


3

NAVIGATION SYSTEM

## 4. SETUP

### MAINTENANCE INFORMATION SETTING

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Vehicle"** on the "Setup" screen.
- 3 Select **"Maintenance"** on the "Vehicle Settings" screen.
- 4 Select the desired screen button.

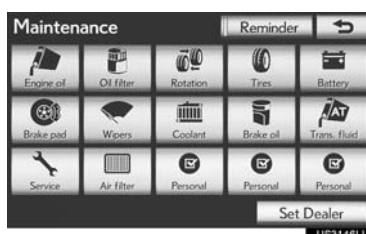

- When the vehicle needs to be serviced, the screen button color will change to orange.

Screen button	Function
"Engine oil"	Replace engine oil
"Oil filter"	Replace engine oil filter
"Rotation"	Rotate tires
"Tires"	Replace tires
"Battery"	Replace 12-volt battery
"Brake pad"	Replace brake pads
"Wipers"	Replace wiper blades

Screen button	Function
"Coolant"	Replace coolant
"Brake oil"	Replace brake fluid
"Trans. fluid"	Replace transmission fluid
"Service"	Scheduled maintenance
"Air filter"	Replace air filter
"Personal"	New information items can be created separately from provided ones.
"Delete All"	Select to cancel all conditions which have been input.
"Reset All"	Select to reset the item which has satisfied a condition.
"Set Dealer"	Select to register dealer information. (See "DEALER SETTING" on page 133.)
"Dealer Info."	Select to edit dealer information. (See "DEALER SETTING" on page 133.)
"Reminder"	When this screen button is selected, the indicator is illuminated. The system is set to give maintenance information with the "Maintenance Reminder" screen. (See page 32.)

## 5 Input the conditions.



No.	Function
1	Select to input the next maintenance date.
2	Select to input the driving distance until the next maintenance check.
3	Select to cancel the date and distance conditions.
4	Select to reset the date and distance conditions.

## 6 Select "OK".

- The screen then returns to the "Maintenance" screen.


**INFORMATION**

- For scheduled maintenance information, refer to "Scheduled Maintenance Guide" or "Owner's Manual Supplement".
- Depending on driving or road conditions, the actual date and distance maintenance should be performed may differ from the stored date and distance in the system.


**DEALER SETTING**

Dealer information can be registered in the system. With dealer information registered, route guidance to the dealer is available.

- Press the "MENU" button on the Remote Touch, then select "Setup".
- Select "Vehicle" on the "Setup" screen.
- Select "Maintenance" on the "Vehicle Settings" screen.
- Select "Set Dealer".

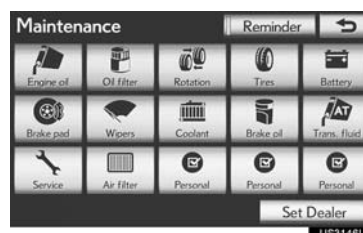


- If a dealer has not been registered, enter the location of a dealer in the same way as for a destination search. (See "DESTINATION SEARCH" on page 66.)

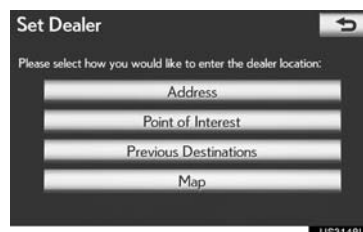

- When "Set Dealer" registration is finished, the "Dealer" screen is displayed.

4. SETUP


- 6 Select “Edit” next to the item to be edited.

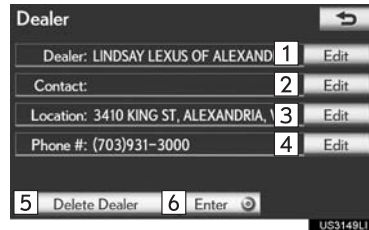


No.	Function
1	Select to enter the name of a dealer. (See page 134.)
2	Select to enter the name of a dealer member. (See page 134.)
3	Select to set the location. (See page 135.)
4	Select to enter the phone number. (See page 135.)
5	Select to delete the dealer information displayed on the screen.
6	Select to set the displayed dealer as a destination. (See “STARTING ROUTE GUIDANCE” on page 85.)

■ TO EDIT “Dealer” OR “Contact”

- 1 Select “Edit” next to “Dealer” or “Contact”.

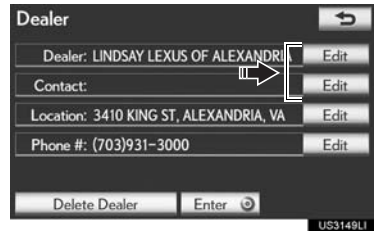


- 2 Enter the name using the alphanumeric keys.

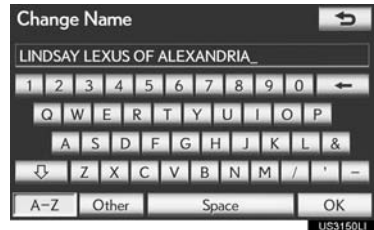

- Up to 32 characters can be entered.
- 3 Select “OK”.
- The previous screen will be displayed.

## ■ TO EDIT "Location"

- 1 Select "Edit" next to "Location".

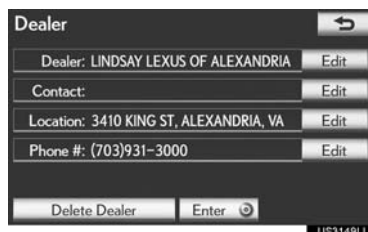

- 2 Select one of the 8 directional screen buttons to move the cursor to the desired point on the map screen.




- 3 Select "OK".

- The previous screen will be displayed.

## ■ TO EDIT "Phone #" (PHONE NUMBER)

- 1 Select "Edit" next to "Phone #".

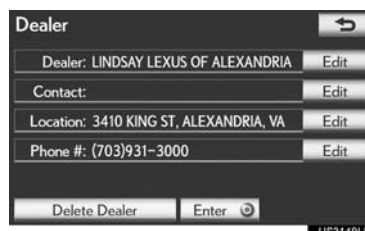

- 2 Enter the number using number keys.




- 3 Select "OK".

- The previous screen will be displayed.

### VEHICLE CUSTOMIZATION

Vehicle settings can be changed.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Vehicle"** on the "Setup" screen.
- 4 Select **"Vehicle Customization"**.

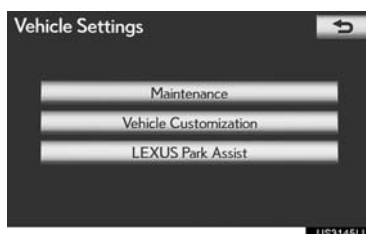

- 5 Select the desired items to be set.
  - For a list of the settings that can be changed, refer to "Owner's Manual".
- 6 After changing the settings, select **"Save"**. A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

### CAUTION

- When performing the customization procedure, ensure that there is sufficient ventilation in the vehicle and surrounding area. If there is insufficient ventilation, exhaust gases may collect and enter the vehicle. Exhaust gases include harmful carbon monoxide (CO) and inhaling them may lead to death or a serious health hazard.

### INFORMATION

- To avoid discharging the 12-volt battery, perform the customization procedure with the engine running <the hybrid system operating>.